

## TV Kanaler på Regstrup Antenneanlæg

Knap	Kanal	Frekvens MHZ	Programnavn	Grundpakke
	C 9	203,25 MHZ	DR 1	
	C 6	182,25 MHZ	TV 2 ØST	
	C 5	175,25 MHZ	DR2	
	S 30	375,25 MHZ	TV 3	
	S 31	383,25 MHZ	TV 3+	Prøvekanal
	S 9	161,25 Mhz	DK 4	
	C 52	719,25 MHZ	TV 2 Zulu	
	S 25	335,25 MHZ	TV2 Charlie	
	S 10	168,25 MHZ	Sverige 1	
	C 54	735 MHZ	Kanal 4	Prøvekanal
	C 56	751,25 MHZ	Kanal 5	
	K 63	807,25 MHZ	TV2 Film	
	C 59	775,25 ;Mhz	The Voice	
	C 51	711,25 MHZ	Discovery	
	S 27	351,25 MHZ	National Geographic	
	K 50	703,25 MHZ	Disney Channel	
	S28	359,25 MHZ	Cartoon/TCM	
	S 33	399,25 MHZ	Animal Planet	
	S 32	391,25 MHZ	EuroSport Nordic	
	C 10	210,24 MHZ	TV 2 Sverige	
	C 8	196,25 MHZ	TV 4 Sverige	
	C 7	189,25 mHZ	RTL	
MUX1	C11	219,50 MHZ	DVB-T	
MUX2	C 12	226,50 MHZ	DVB-T	
MUX1	C 51	711,25 MHZ	DVB-T	
MUX2	C 49	698,25 MHZ	DVB-T	
	C 55	743,25 MHZ	Canal 9	Prøvekanal
	C 57	759,25 MHZ	Viasat/History	
	C 60	783,25 MHZ	Viasat/Explorer	
	C 62	799,25 MHZ	Viasat Crime/Nature	
	C21	471,25 Mhz	TV3 Puls	Prøvekanal

## Radiokanaler

Programnavn	Frekvens MHZ
DR P1	94,80 MHZ
DR P2	101,10 MHZ
DR P3	94,30 MHZ
DR P4	92,00 MHZ
100 FM	100,00 MHZ